


# 6m ★★★★★ series Classic Prime

UK TENTS

## Party Tent

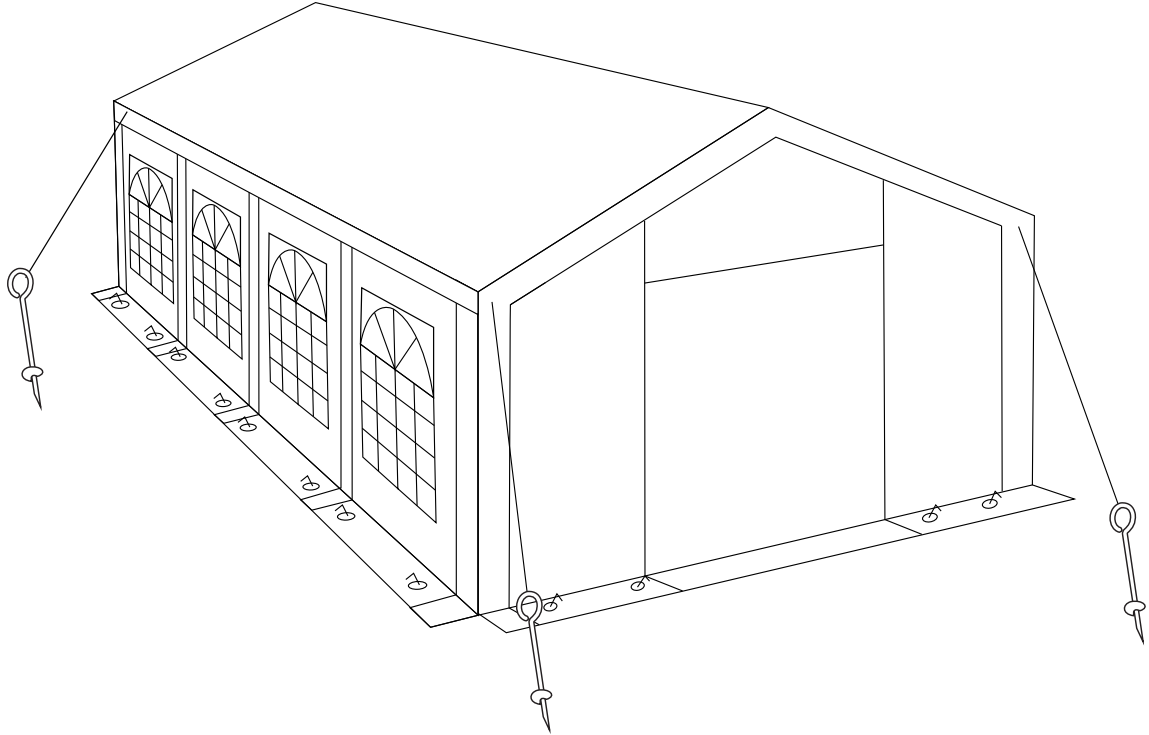

Please read instructions COMPLETELY before assembly. This tent MUST be securely anchored.

This tent is a temporary structure and should be disassembled at harsh weather conditions as stormy winds, snow fall or ice.

### Important Warnings – Please Read Carefully

- **Check Local Rules:** Prior to installation, consult with all local municipal codes regarding installation of temporary shelters. The owner of the tent is solely responsible for ensuring compliance and proper mounting.
- **Weather Damage:** We are **not responsible** for any damage to the unit or its contents caused by acts of nature.
- **Secure Your Tent:** Always use storm straps and ground pegs when setting up the structure. Choosing the correct anchoring system is your responsibility.  
(Please note: Heavy-duty anchors are sold separately and are not included with this product.)
- **Regular Checks:** Periodically check the anchors to ensure the shelter remains stable.
- **Extreme Weather:** In case of extreme weather conditions, remove the tent cover immediately.
- **Flying Tents:** Any shelter that is not anchored securely may fly away and cause damage. We are not responsible for any shelter that blows away.
- **Designed for Mild Weather:** This canopy is intended to protect against sun, rain, and light snow only. It is not designed to withstand the loads from wind, heavy rain, snow, or ice storms. This structure has not been tested for specific snow, rain, or wind loads.

# 6m ★ ★ ★ ★ ★ series Classic Prime



- **No Fires:** Do not use open flames, welding equipment, or any other ignition sources inside the tent.

## Cleaning and Storage

- A tight cover ensures longer life and performance. Always maintain a tight cover. Loose fabric can accelerate deterioration of cover fabric.

- Immediately remove any accumulated water, snow or ice from the roof structure.

- DO NOT use bleach or harsh abrasive products to clean the fabric cover. Cover is easily cleaned with mild soap and water.

## Safety & Setup Guidelines

- **Wear Protective Gear:** Always use gloves and stable shoes when assembling the metal frame. The components may have sharp edges or be oily due to the manufacturing process.
- **Snow Removal:** Remove snow promptly from the tarpaulin to avoid overloading the structure.
- **Adverse Weather:** Temporary tents should be taken down in the event of heavy wind, snowfall, or ice to prevent damage or injury.
- **Keep Away from Heat:** Maintain a minimum distance of 1.2 meters between the tarpaulin and any heat sources, electrical, gas, or other utility pipes.
- **Check Local Regulations:** You can obtain detailed location and safety information from your local authority.
- **Dry Before Storage:** Always allow the pavilion to fully dry in an upright position before packing it away to prevent mold or material degradation.

## Choose a Safe Location:

- Put the tent on a flat, non-slippery surface.
- Try to choose a spot that is protected from wind.
- Make sure the tent isn't rubbing against trees, walls, or anything sharp.
- Keep the tent away from fires and think about which way the wind blows.
- Let the tent dry out fully before you pack it away


# 6m ★★★★★ series Classic Prime

UK TENTS

## Assembly Instructions


### Step 1.

- Assembly is easiest if you layout all parts on the ground as shown below. 6x6m has 3 section, 6x8m 4 sections, 6x10m has 5 sections and 6x12 has 6 sections.
- Assemble the roof frame by mounting parts 4 to 8 on the pipes (parts 1 and 2). Use the bolts (9) and wing nuts (14) to attach the parts.

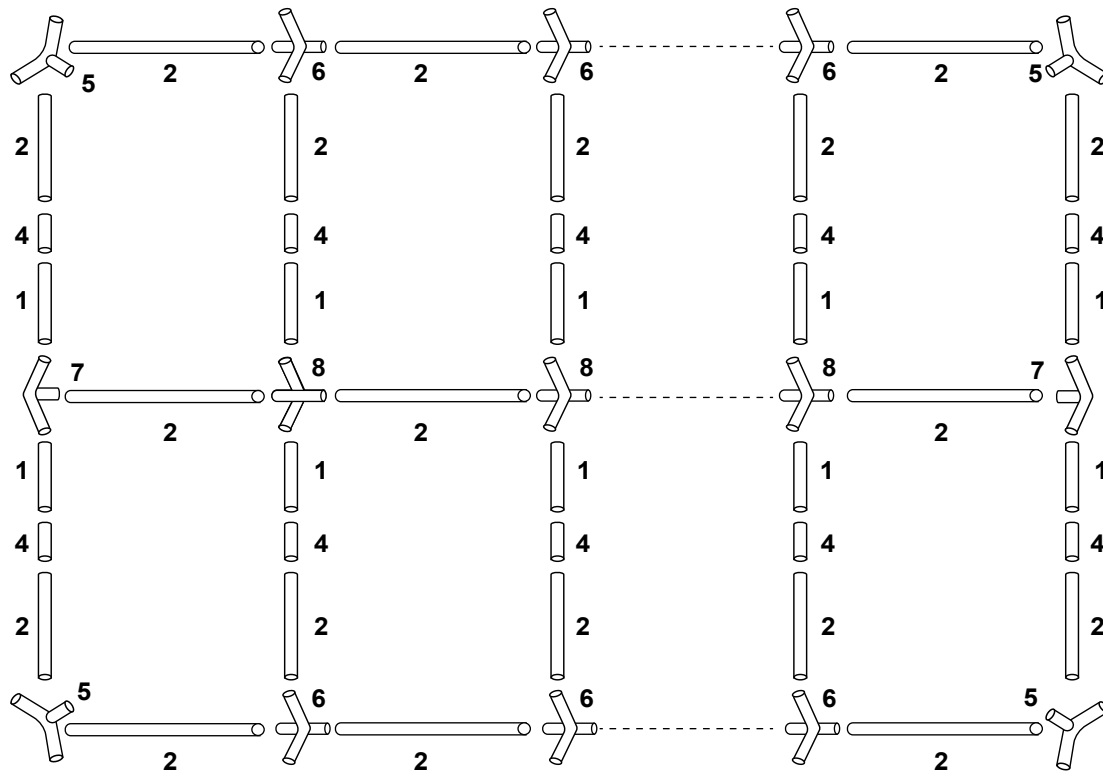

### Step 2.

- Use the turn buckle (22) and the wire rope (22) to stabilize the roof structure.

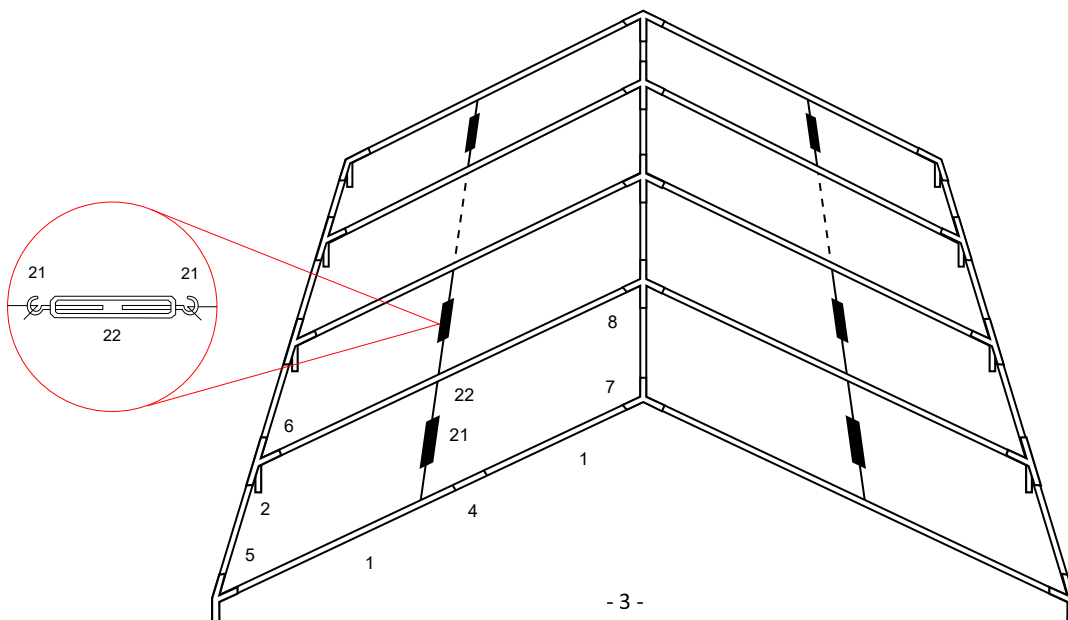


# 6m ★★★★★ series Classic Prime

UK TENTS


## Step 3.

- Lift one side of the tent frame and attach the legs (3). Place the roof (18) onto the frame and use the bungees (13) to fasten it. Be sure not to put too much tension on the bungees in order not to make attaching the other side more difficult.

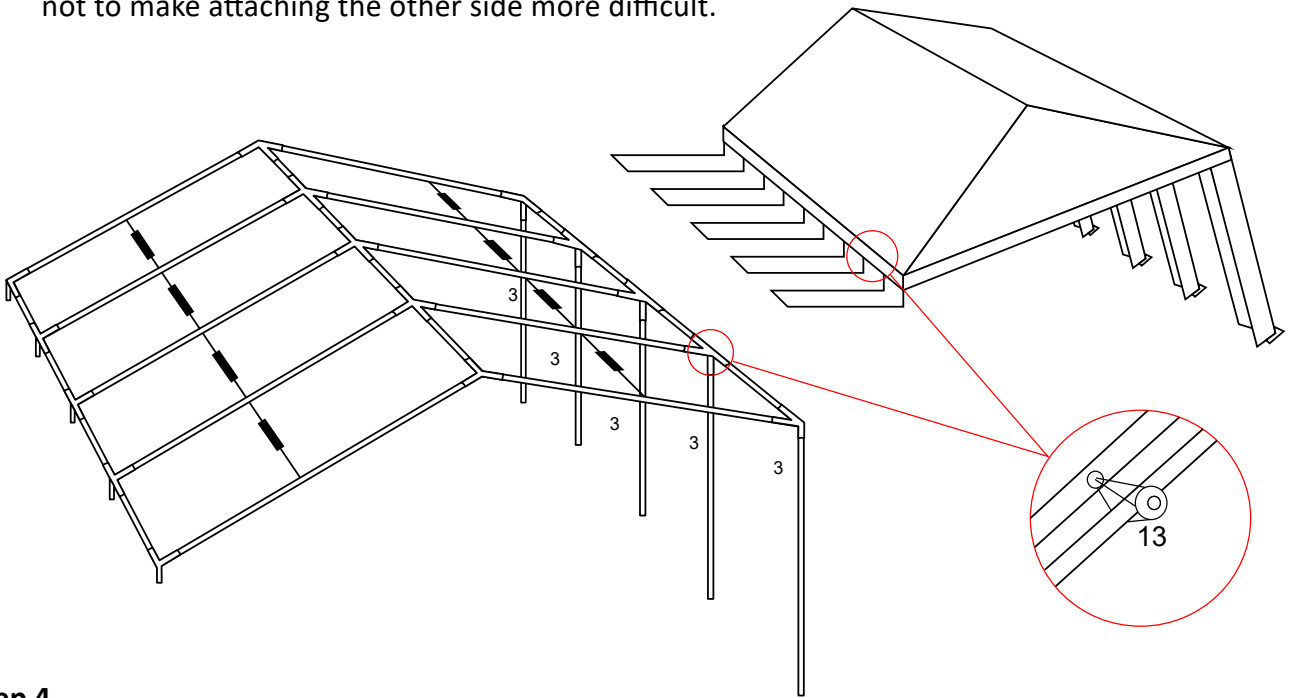

## Step 4.

- Attach the legs on the other side. Make sure, that the leg pipes are in vertical position, to avoid over-tension on another side.
- Use the big ground pegs (11) to fasten the legs to the ground. Attach the side covers to the pipes (3) using hooks (17).

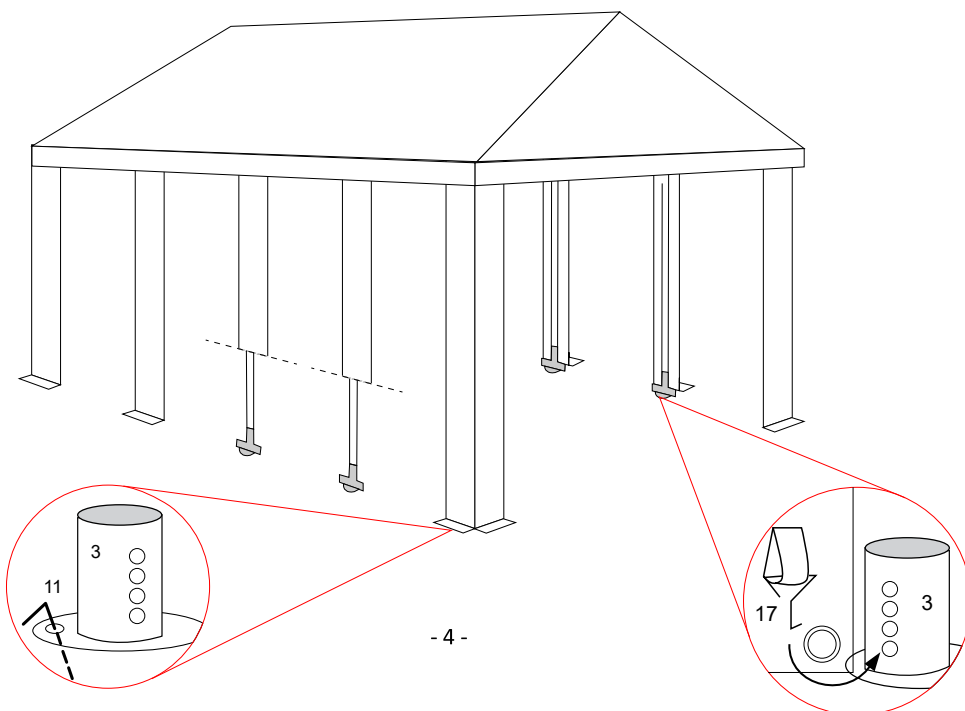


# 6m ★★★★★ series Classic Prime

UK TENTS

 
 
 

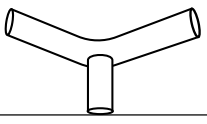
 
 
 
 



 

 
## Step 4.

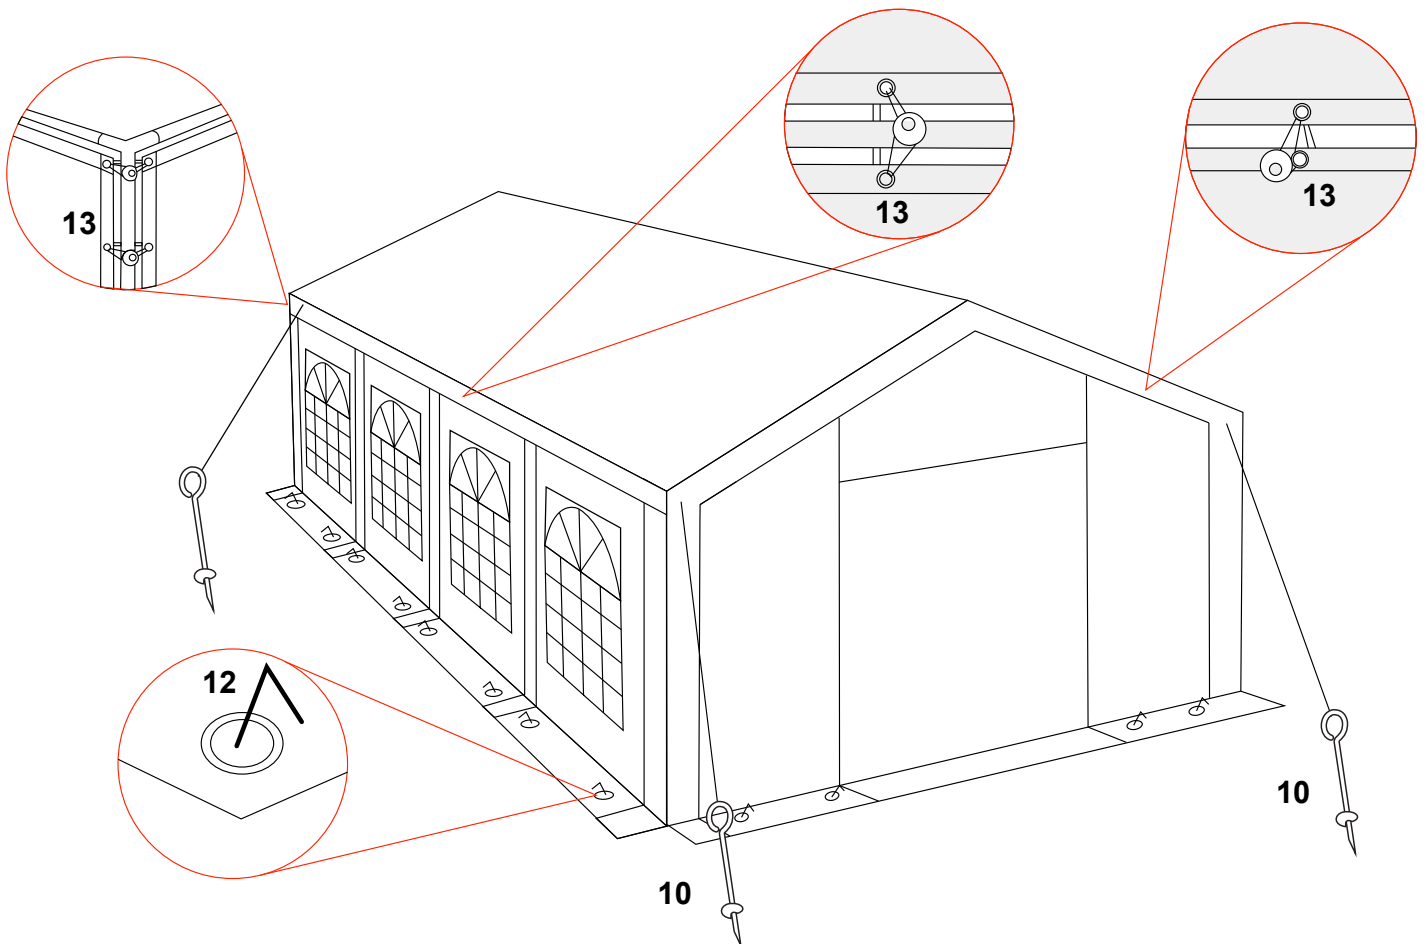- Unfold the side walls (19) and the end walls (20) and attach the side walls and end walls to the frame using the bungees (13).
- Use the small ground pegs (12) to fasten the end walls to the ground.
- The guy rope (15) runs from every corner of the tent and is braced to the ground using the Spiral peg (10).



 
 

 

 

# 6m series Classic Prime



Parts List			Quantity				
No.	Name	Drawing	6x6m	6x8m	6x10m	6x12m	6x14m
1	Rafter Poles 1442mm		16	20	24	<b>28</b>	32
2	Cross Poles 1930mm		9	12	15	<b>18</b>	21
3	Leg pole 1898mm		8	10	12	<b>14</b>	16
4	Connecting Pole 500mm		8	10	12	<b>14</b>	16
5	3-way-corner 110° ( Leg connector)		4	4	4	<b>4</b>	4
6	4-way-corner 110°( Leg connector)		4	6	8	<b>10</b>	12
7	3-way-corner 140° ( roof connectors)		2	2	2	<b>2</b>	2
8	4-way-corner 140°( roof connectors)		2	3	4	<b>5</b>	6
9	Bolt		58	74	90	<b>106</b>	122
10	Spiral peg		4	4	4	<b>4</b>	4
11	Big ground Peg 6x180mm		8	10	12	<b>14</b>	16
12	Small ground Peg 4x180mm		28	34	40	<b>46</b>	52
13	Long Bungee Balls		92	110	128	<b>146</b>	164
14	Wing nut		58	74	90	<b>106</b>	122
15	Guy rope 3m		4	4	4	<b>4</b>	4

# 6m ★★★★★ series Classic Prime

**UK TENTS**

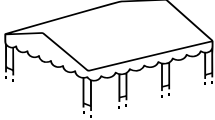16	Spanner		1	1	1	<b>1</b>	1
17	Hook		8	10	12	<b>14</b>	16
18	Roof		1	1	1	<b>1</b>	1
19	Side wall		6	8	10	<b>12</b>	14
20	End wall		2	2	2	<b>2</b>	2
<b>21</b>	Wire rope		12	16	20	<b>24</b>	28
<b>22</b>	Turn buckle		6	8	10	<b>12</b>	14

**UK TENTS**

U K T E N T S . C O M