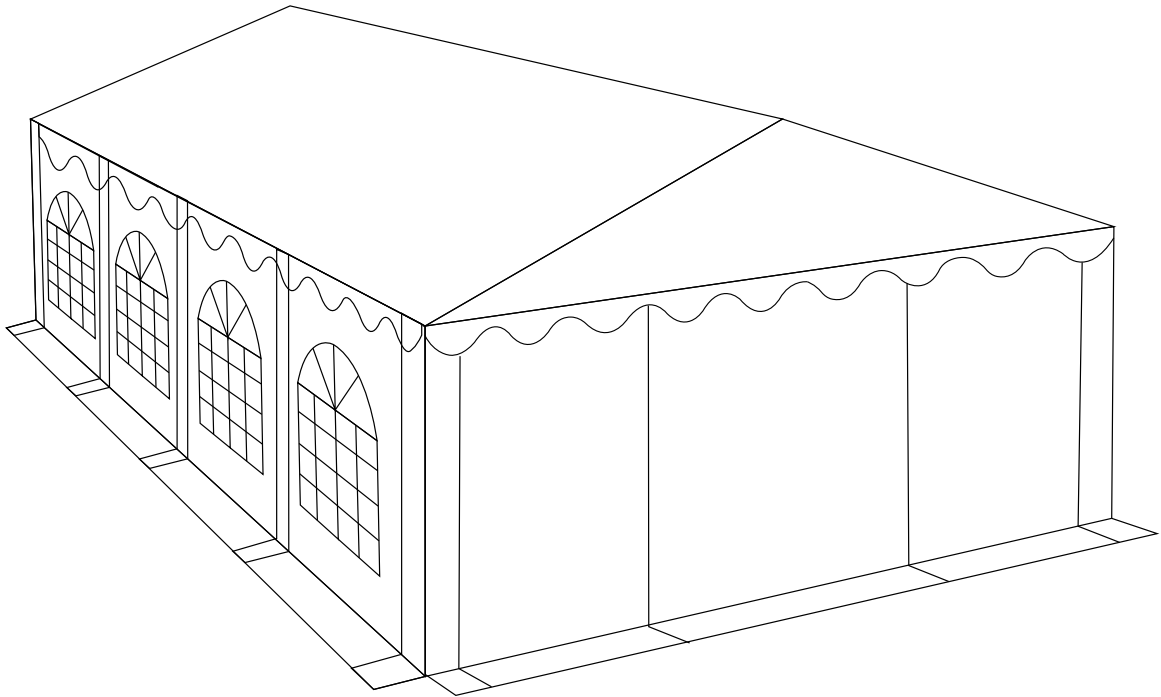


5m ★★★★★ series Classic Prime

UK TENTS

Party Tent



Please read instructions COMPLETELY before assembly. This tent MUST be securely anchored.

This tent is a temporary structure and should be disassembled at harsh weather conditions as stormy winds, snow fall or ice.

Important Warnings – Please Read Carefully

- **Check Local Rules:** Prior to installation, consult with all local municipal codes regarding installation of temporary shelters. The owner of the tent is solely responsible for ensuring compliance and proper mounting.
- **Weather Damage:** We are **not responsible** for any damage to the unit or its contents caused by acts of nature.
- **Secure Your Tent:** Always use storm straps and ground pegs when setting up the structure. Choosing the correct anchoring system is your responsibility.
(Please note: Heavy-duty anchors are sold separately and are not included with this product.)
- **Regular Checks:** Periodically check the anchors to ensure the shelter remains stable.
- **Extreme Weather:** In case of extreme weather conditions, remove the tent cover immediately.
- **Flying Tents:** Any shelter that is not anchored securely may fly away and cause damage. We are not responsible for any shelter that blows away.
- **Designed for Mild Weather:** This canopy is intended to protect against sun, rain, and light snow only. It is not designed to withstand the loads from wind, heavy rain, snow, or ice storms. This structure has not been tested for specific snow, rain, or wind loads.

5m ★ ★ ★ ★ ★ series Classic Prime



- **No Fires:** Do not use open flames, welding equipment, or any other ignition sources inside the tent.

Cleaning and Storage

- A tight cover ensures longer life and performance. Always maintain a tight cover. Loose fabric can accelerate deterioration of cover fabric.

- Immediately remove any accumulated water, snow or ice from the roof structure.

- DO NOT use bleach or harsh abrasive products to clean the fabric cover. Cover is easily cleaned with mild soap and water.

Safety & Setup Guidelines

- **Wear Protective Gear:** Always use gloves and stable shoes when assembling the metal frame. The components may have sharp edges or be oily due to the manufacturing process.
- **Snow Removal:** Remove snow promptly from the tarpaulin to avoid overloading the structure.
- **Adverse Weather:** Temporary tents should be taken down in the event of heavy wind, snowfall, or ice to prevent damage or injury.
- **Keep Away from Heat:** Maintain a minimum distance of 1.2 meters between the tarpaulin and any heat sources, electrical, gas, or other utility pipes.
- **Check Local Regulations:** You can obtain detailed location and safety information from your local authority.
- **Dry Before Storage:** Always allow the pavilion to fully dry in an upright position before packing it away to prevent mold or material degradation.

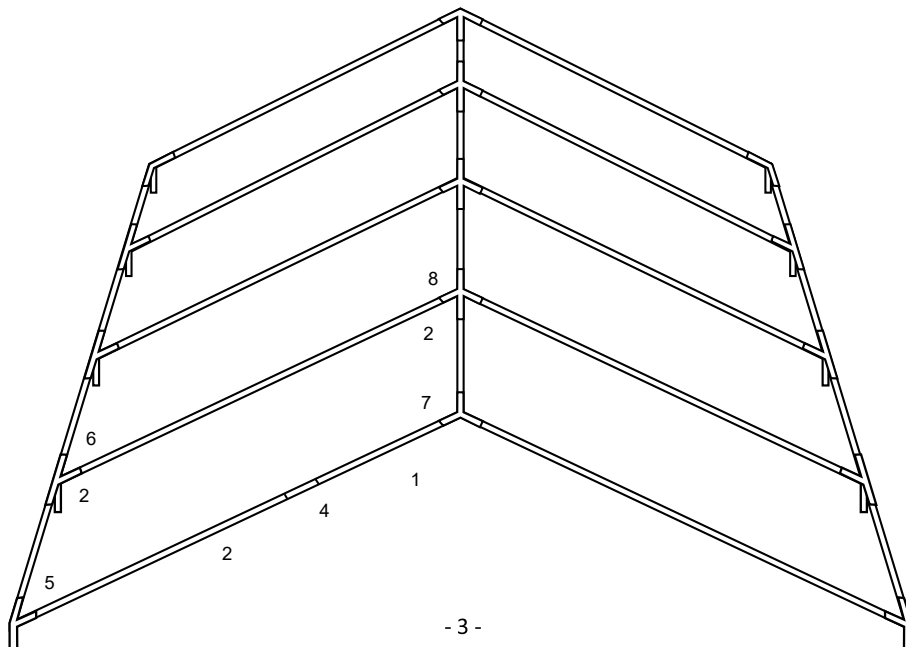
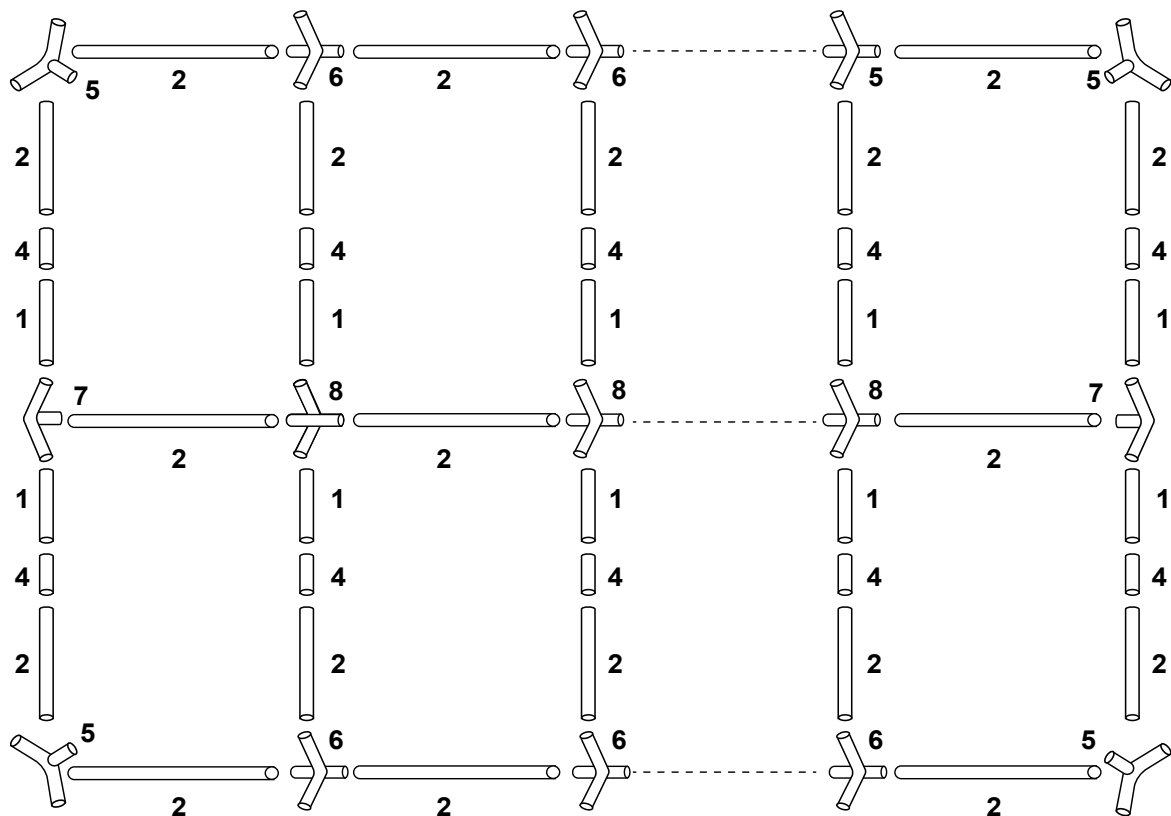
Choose a Safe Location:

- Put the tent on a flat, non-slippery surface.
- Try to choose a spot that is protected from wind.
- Make sure the tent isn't rubbing against trees, walls, or anything sharp.
- Keep the tent away from fires and think about which way the wind blows.
- Let the tent dry out fully before you pack it away

Assembly Instructions

Step 1.

- Assembly is easiest if you layout all parts on the ground as shown below. 5x6m has 3 section, 5x8m 4 sections, 5x10m has 5 sections and 5x12 has 6 sections.
- Assemble the roof frame by mounting parts 4 to 8 on the pipes (parts 1 and 2). Use the bolts (9) to attach the parts.

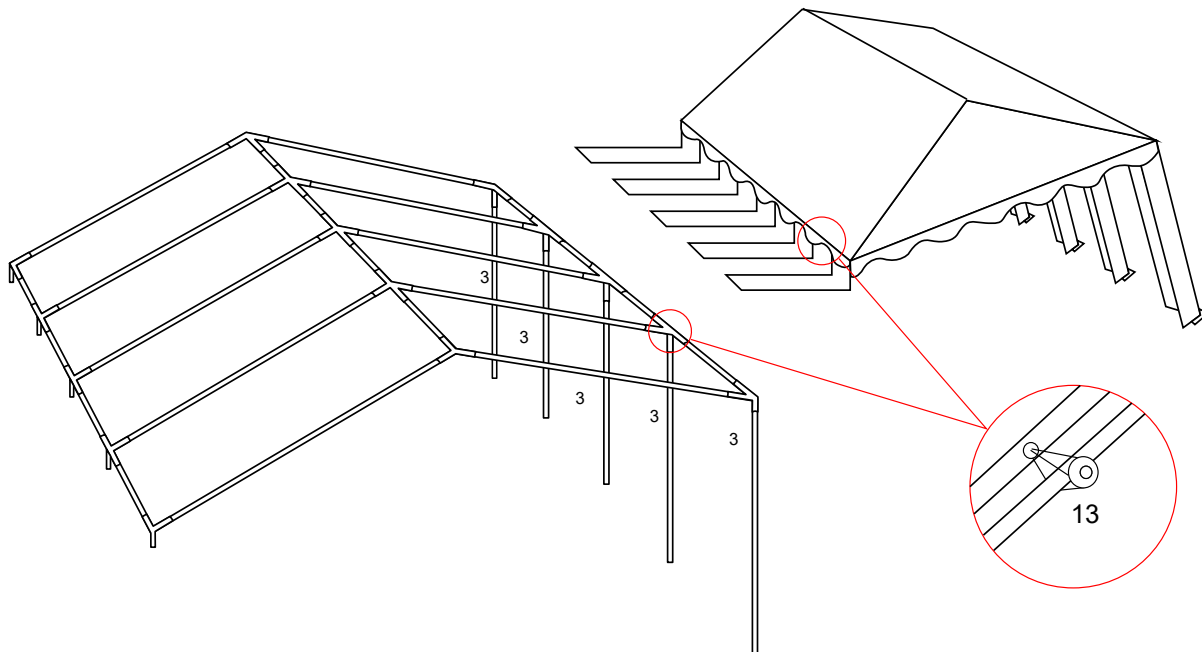


5m ★★★★★ series Classic Prime

UK TENTS

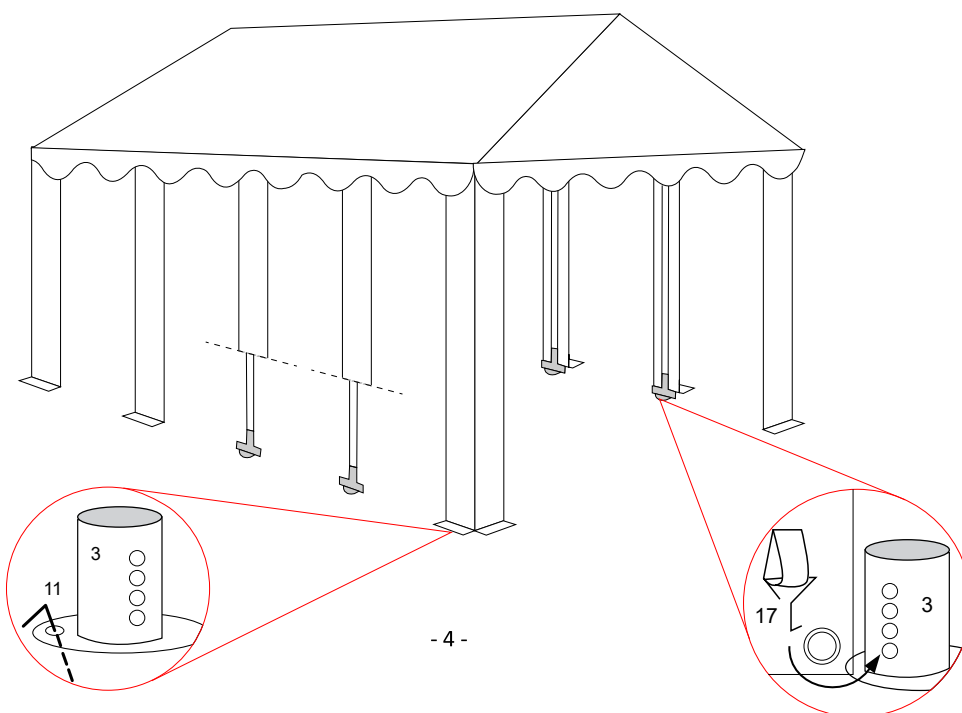
Step 2.

- Lift one side of the tent frame and attach the legs (3). Place the roof (18) onto the frame and use the bungees (13) to fasten it.
- Be sure not to put too much tension on the bungees in order not to make attaching the other side more difficult.



Step 3.

- Attach the legs on the other side. Make sure, that the leg pipes are in vertical position, to avoid overtension on another side.
- Use the big ground pegs (11) to fasten the legs to the ground. Attach the side covers to the pipes (3) using hooks (17).

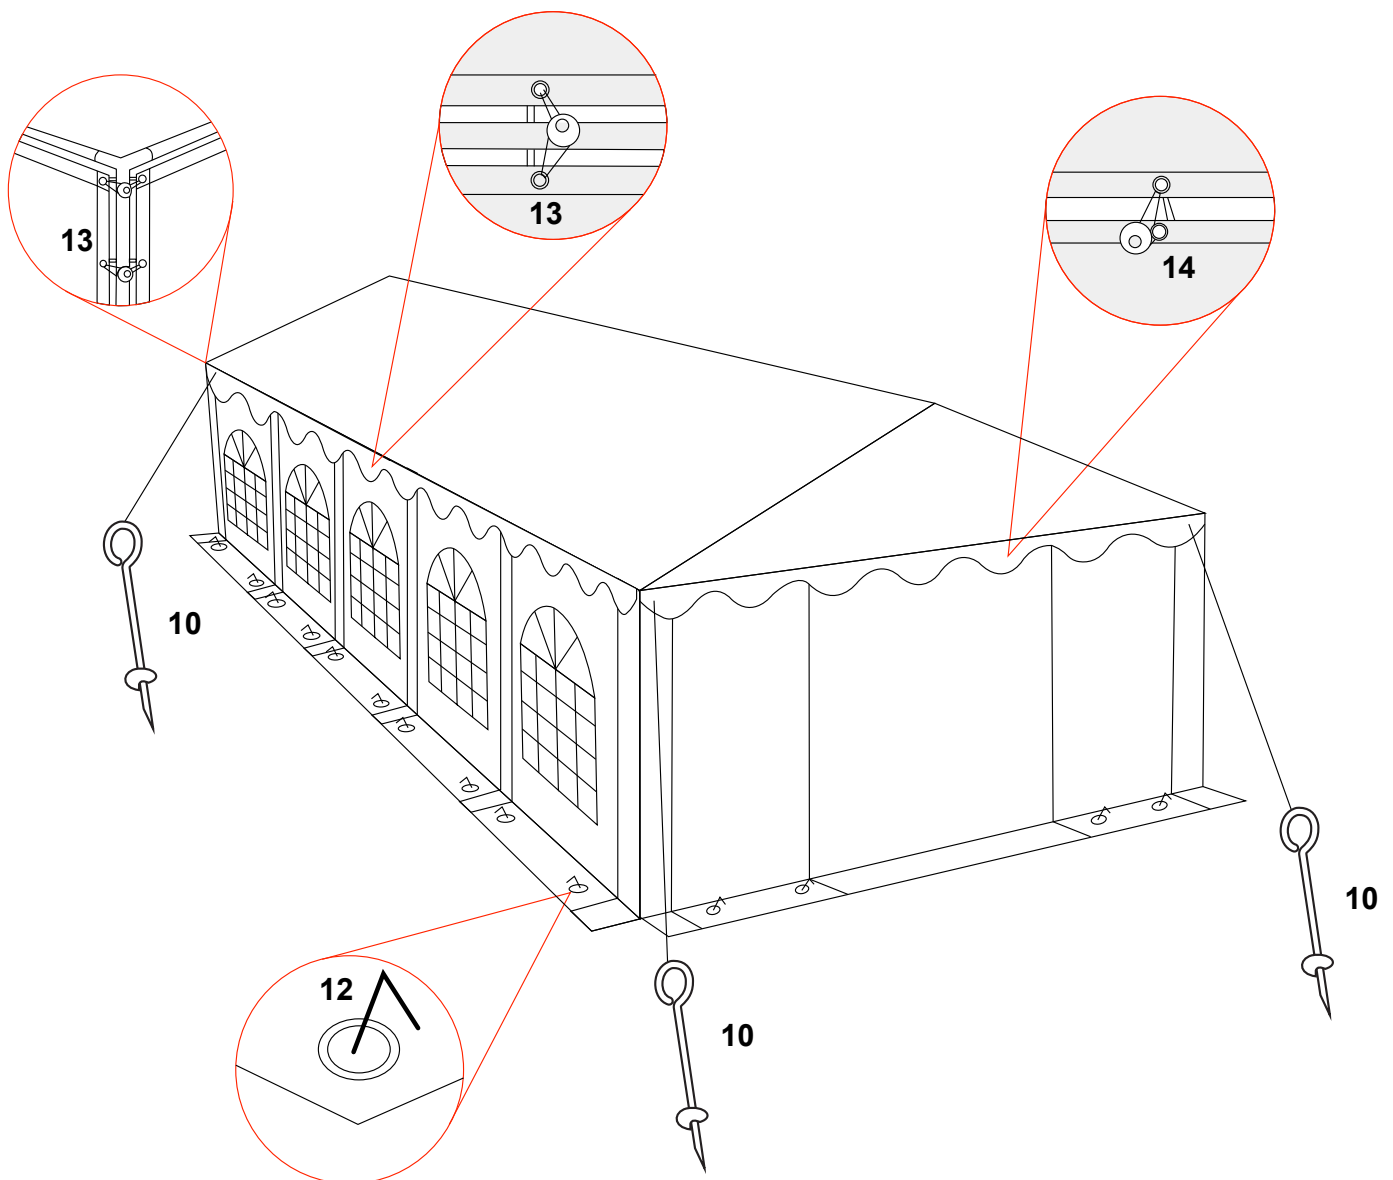


5m ★★★★★ series Classic Prime

UK TENTS

 
 
 
 
 
 
 
Step 4.

- Unfold the side walls (19) and the end walls (20) and attach the side walls to the frame using the bungees (13). Attach the end walls directly to the roof using the short bungees (14). Use the small ground pegs (12) to fasten the end walls to the ground.
- The guy rope runs from every corner of the tent and is braced to the ground using the Spiral peg (10).



 
 
 
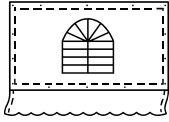
5m ★★★★★ series Classic Prime

UK TENTS

Parts List			Quantity				
No.	Name	Drawing	5x4m	5x6m	5x8m	5x10m	5x12m
1	Rafter Poles 510mm		6	8	10	12	14
2	Cross Poles 1930mm		12	17	22	27	32
3	Leg pole 1898mm		6	8	10	12	14
4	Connecting Pole 200mm		6	8	10	12	14
5	3-way-corner 110° (Leg connector)		4	4	4	4	4
6	4-way-corner 110°(Leg connector)		2	4	6	8	10
7	3-way-corner 140° (roof connectors)		2	2	2	2	2
8	4-way-corner 140°(roof connectors)		1	2	3	4	5
9	Bolt with wing nut		42	58	74	90	106
10	Spiral peg		4	4	4	4	4
11	Big ground Peg 6x180mm		6	8	10	12	14
12	Small ground Peg 4x180mm		22	28	34	40	46
13	Long Bungee Balls		70	88	106	124	142
14	Short Bungee Balls		22	22	22	22	22

5m ★★★★★ series Classic Prime

UK TENTS

15	Guy rope 3m		4	4	4	4	4
16	Spanner		1	1	1	1	1
17	Hook		6	8	10	12	14
18	Roof		1	1	1	1	1
19	Side wall		4	6	8	10	12
20	End wall		2	2	2	2	2



U K T E N T S . C O M